



M-1447-BSPRT  
2021+MY Bronco Sport  
BRONCO SPORT HERITAGE BADGE KIT

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

**PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY**  
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788


Please visit <https://www.performanceparts.ford.com> for warranty information



**Kit contents:**

Description	Quantity
BRONCO SPORT HERITAGE BADGE	2

**Special Tool(s) / General Equipment**

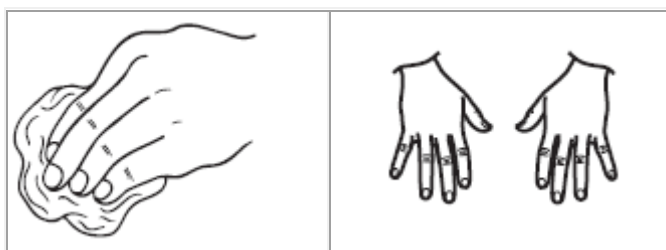

**Installation**

1. Intended surface should be flat, or near flat, and clean of any debris
2. Wipe surface with an alcohol cleaning wipe
3. Remove backing from tape
4. Attach emblem
5. Apply pressure using hands

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)